



iMod Scene Module Installation

Switch-plate



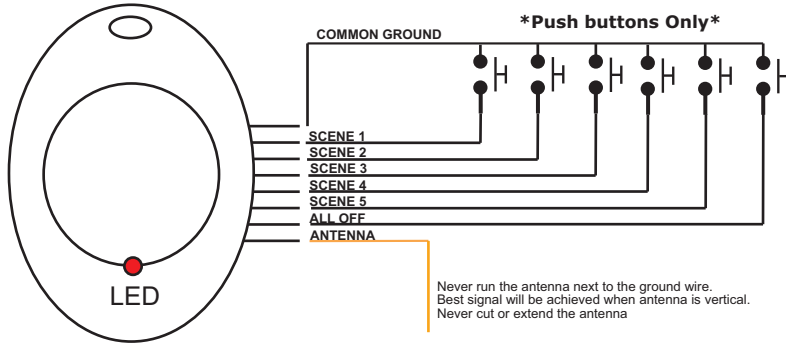


Bell type push buttons only
Wire directly to QS iMod Scene module

LED INDICATOR

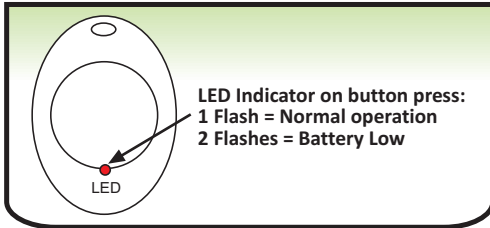


Button Linking:

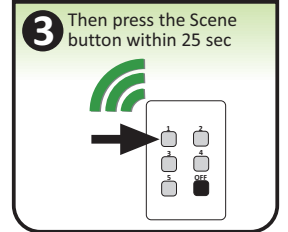
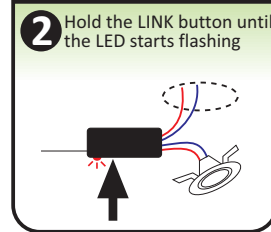
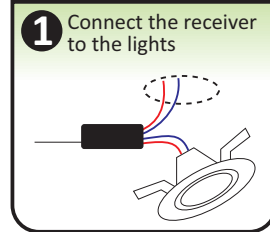


To unlink a button: Repeat steps 2&3.

BATTERY REPLACEMENT

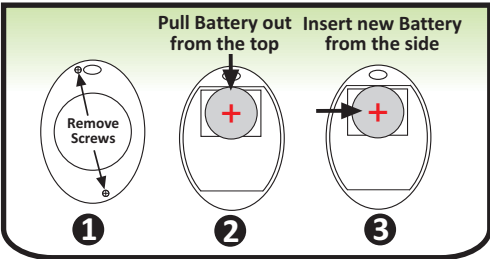


Scene Saving:

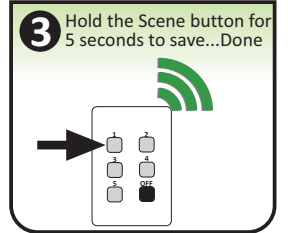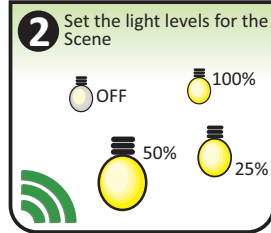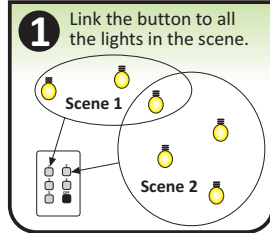


iMod Scene Module Installation

Switch-plate



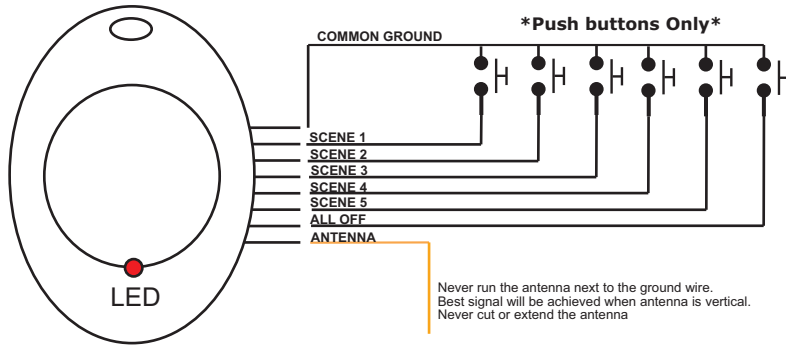


Bell type push buttons only
Wire directly to QS iMod Scene module

LED INDICATOR

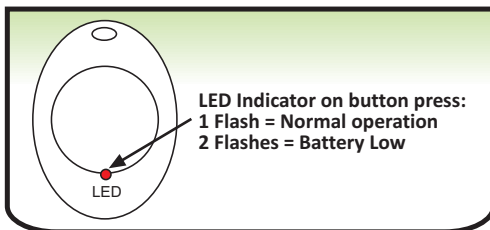


Button Linking:

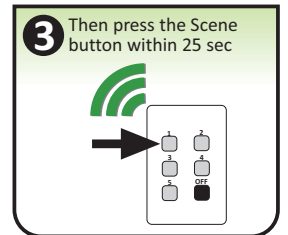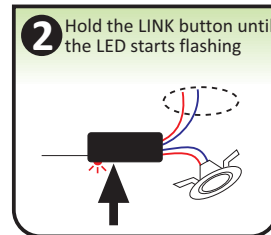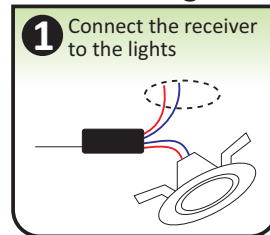

To unlink a button: Repeat steps 2&3.

BATTERY REPLACEMENT

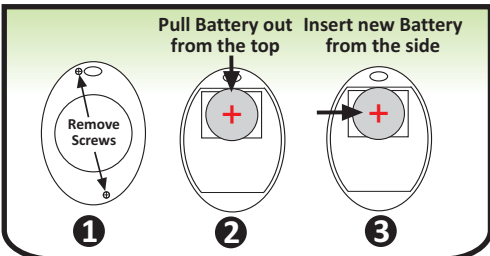

Scene Saving:

