
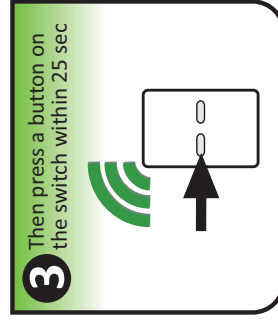
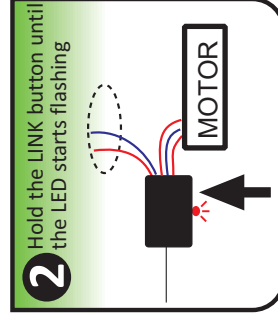


# Qwik-Switch Window/Blind Controller Installation

www.qwikswitch.co.za

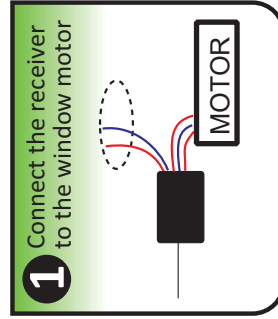

 
To unlink a button: Repeat steps 2&3.

To clear all links in a Receiver: Hold the Link Button until the LED is ON solid (10 sec) then release.

A Receiver can link up to 30 different buttons.

Mount the Switch with double-sided tape or clip off the outer surround to expose standard 2x4 mounting holes.



## Transmitter:



**Button Operation:**  
Press = OPEN/STOP/CLOSE  
Hold = OPEN/CLOSE, STOP on release


**LED Indicator on button press:**  
1 Flash = Normal operation  
2 Flashes = Battery Low

## BATTERY REPLACEMENT

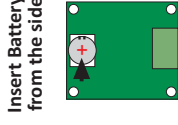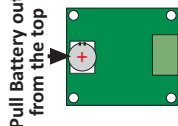

LED will flash 3 times to indicate successful power-up.

## Motor controller:


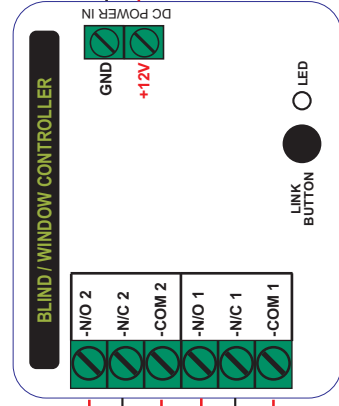


220v AC IN

SPECIFICATIONS: SUPPLY 12V DC, MAXIMUM LOAD PER CONTACT - 5A RESISTIVE, OPEN/DRY CONTACT RELAY OUTPUTS AUTO-OFF AFTER 255 SECONDS

# Qwik-Switch Window/Blind Controller Installation

www.qwikswitch.co.za

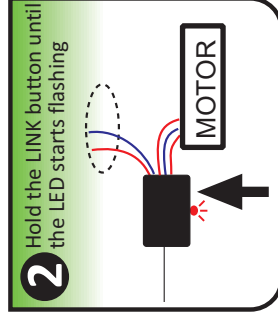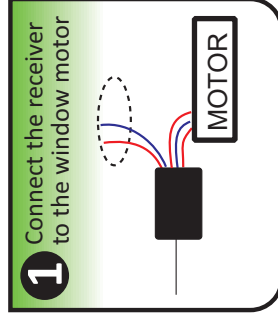


To unlink a button: Repeat steps 2&3.

To clear all links in a Receiver: Hold the Link Button until the LED is ON solid (10 sec) then release.

A Receiver can link up to 30 different buttons.

Mount the Switch with double-sided tape or clip off the outer surround to expose standard 2x4 mounting holes.




## Transmitter:

 

**Button Operation:**  
Press = OPEN/STOP/CLOSE  
Hold = OPEN/CLOSE, STOP on release


**LED Indicator on button press:**  
1 Flash = Normal operation  
2 Flashes = Battery Low

## BATTERY REPLACEMENT

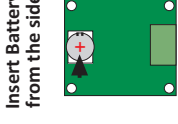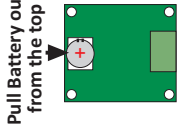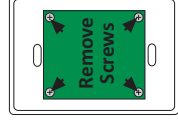

LED will flash 3 times to indicate successful power-up.

## Motor controller:

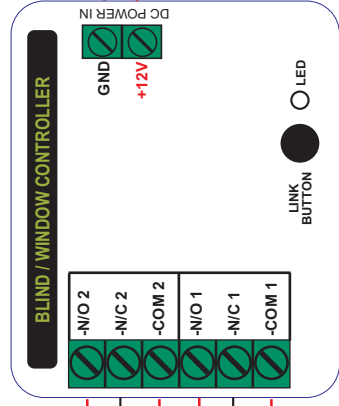

220v AC IN

SPECIFICATIONS: SUPPLY 12V DC, MAXIMUM LOAD PER CONTACT - 5A RESISTIVE, OPEN/DRY CONTACT RELAY OUTPUTS AUTO-OFF AFTER 255 SECONDS