


Linking

1. Hold LINK/TEST BUTTON in until LED flashes, then release.
 2. Press the button on the transmitter....done
 3. Repeat steps 1 & 2 for each additional transmitter button required to be linked.
- To unlink:
4. To Unlink a single transmitter button: Repeat steps 1 & 2 of the linking procedure.
 5. To clear all links in a receiver: Hold the LINK/TEST BUTTON in for approx. 10 seconds until the LED is ON solid, then release.

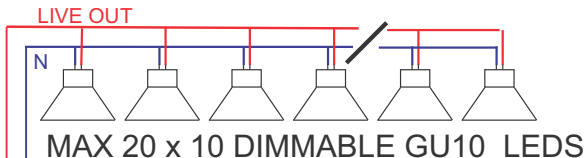

NOTE: Neutral to the GU10 LEDS may be supplied from the dimmer or from the neutral run in the ceiling.