

 
To unlink a button: Repeat steps 2&3.

To clear all links in a Receiver: Hold the Link Button until the LED is ON solid (10 sec) then release.

A Receiver can link up to 30 different buttons.

Mount the Switch with double-sided tape or clip off the outer surround to expose standard 2x4 mounting holes.


Transmitter:




Button Operation:
Press to activate function

LED Indicator on button press:
1 Flash = Normal operation
2 Flashes = Battery Low

BATTERY REPLACEMENT

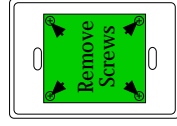

1 Pull Battery out from the top

 

2 Insert Battery from the side





3

LED will flash 3 times to indicate successful power-up.

Motor speed controller:

MODEL: QS-R-D300M

Qwik-Switch Receiver
Motor Speed Controller Version

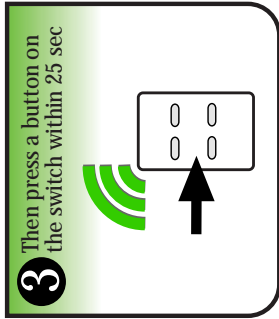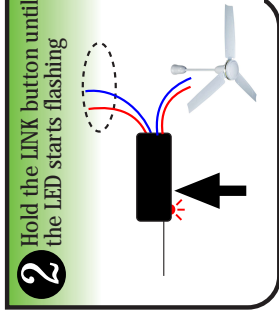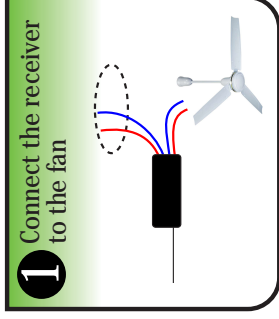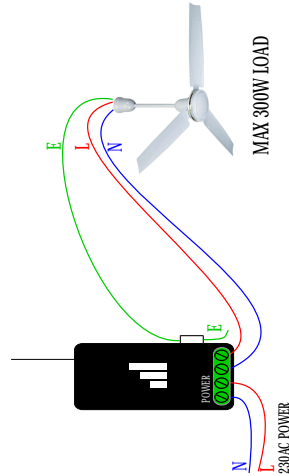


To unlink a button: Repeat steps 2&3.

To clear all links in a Receiver: Hold the Link Button until the LED is ON solid (10 sec) then release.

A Receiver can link up to 30 different buttons.

Mount the Switch with double-sided tape or clip off the outer surround to expose standard 2x4 mounting holes.

 
Transmitter:




Button Operation:
Press to activate function

LED Indicator on button press:
1 Flash = Normal operation
2 Flashes = Battery Low

BATTERY REPLACEMENT

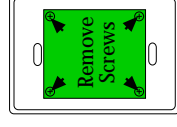

1 Pull Battery out from the top

 

2 Insert Battery from the side


3

LED will flash 3 times to indicate successful power-up.

Motor speed controller:

MODEL: QS-R-D300M

Qwik-Switch Receiver
Motor Speed Controller Version

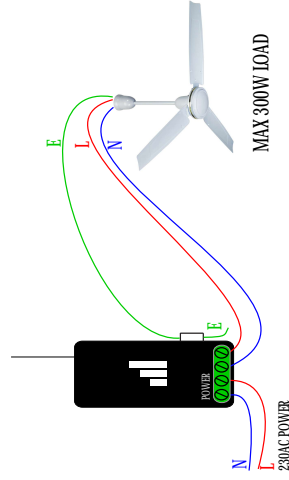

Motor Switch:

MODEL: QS-R-S5M

Qwik-Switch Receiver
Motor Switch Version

