
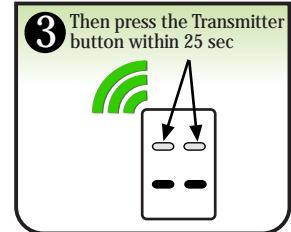
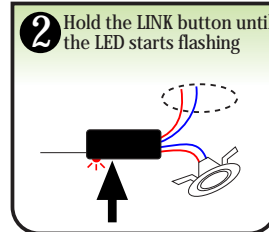




Scene Pad 4 Button (2 Normal, 2 Scene)

Button Linking:

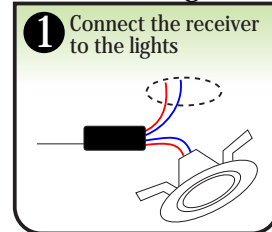


To unlink a button: Repeat steps 2&3.

Scene Saving:


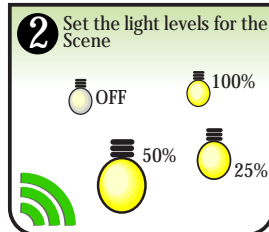
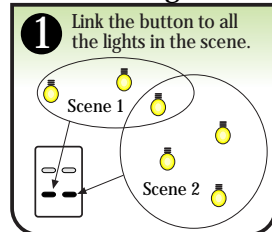


www.qwikswitch.co.za

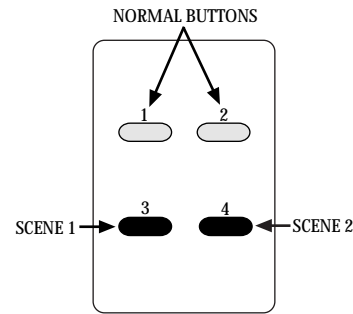



Scene Pad 4 Button (2 Normal, 2 Scene)

Button Linking:

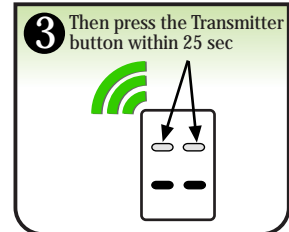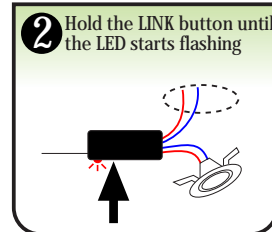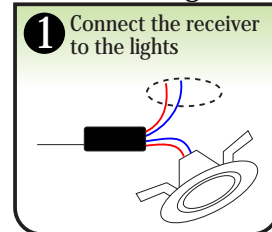


To unlink a button: Repeat steps 2&3.

Scene Saving:


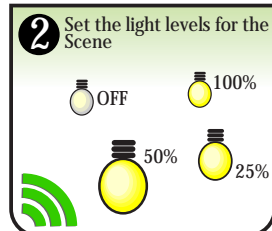
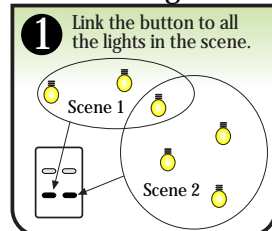


www.qwikswitch.co.za

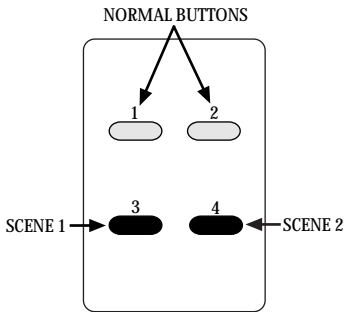




Scene Pad 4 Button (2 Normal, 2 Scene)

Button Linking:

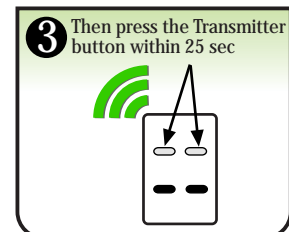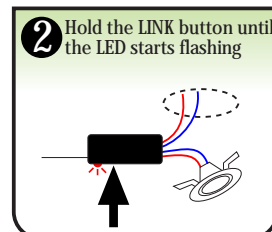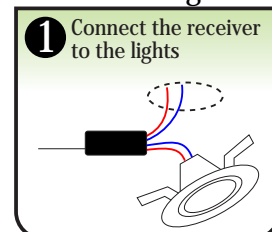

To unlink a button: Repeat steps 2&3.

Scene Saving:

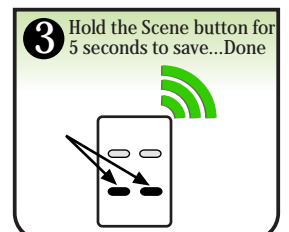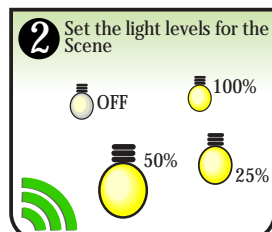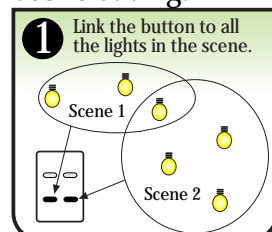

www.qwikswitch.co.za

