
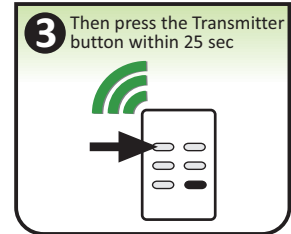
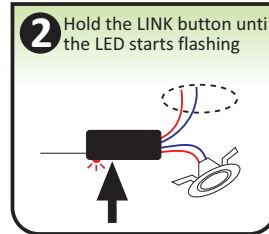





Scene Pad 6 Button (3 Normal, 2 Scene, 1 Off)

Button Linking:

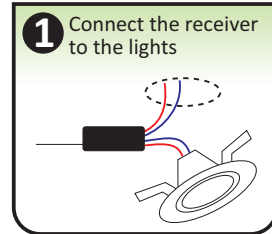




To unlink a button: Repeat steps 2&3.

Scene Saving:

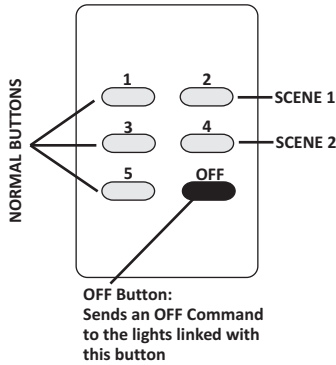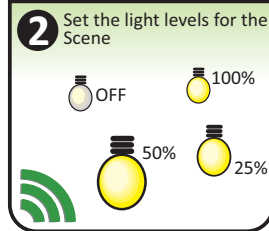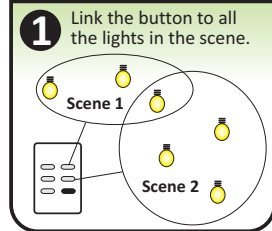





Scene Pad 6 Button (3 Normal, 2 Scene, 1 Off)

Button Linking:

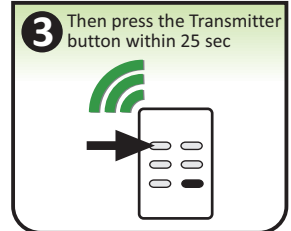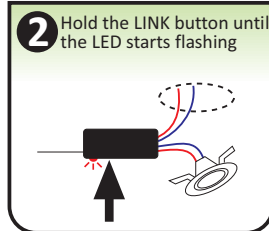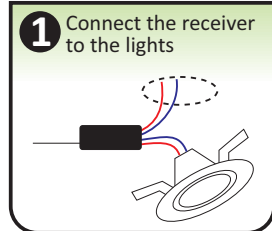




To unlink a button: Repeat steps 2&3.

Scene Saving:

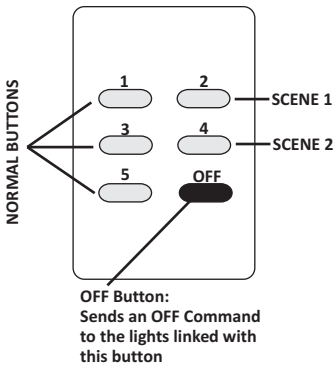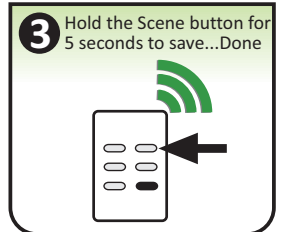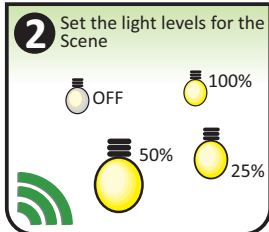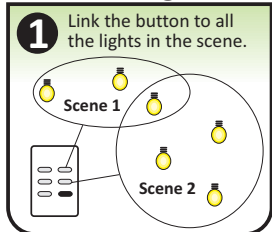

Scene Pad 6 Button (3 Normal, 2 Scene, 1 Off)

Button Linking:

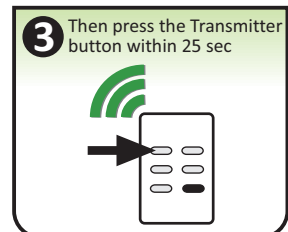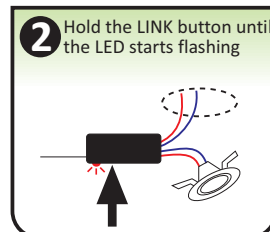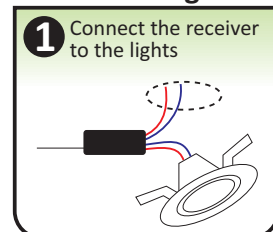

To unlink a button: Repeat steps 2&3.

Scene Saving:

